



Spare parts for "J" transmitter units

n- Joy joystick transmitter unit

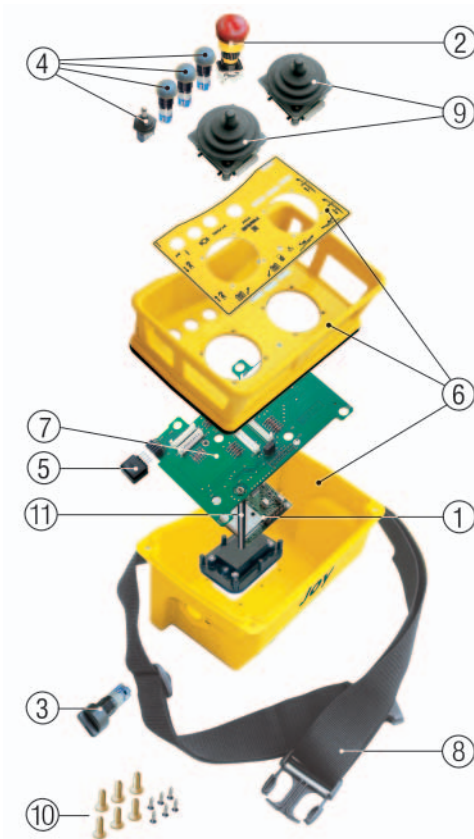

Pos.	Code	Description
1	L42962-1 L43082-1	logic + radio transmitter logic + radio transceiver
2	L33406	emergency stop
3	L33370	key selector
4	L42641 L42643 L42642 L42872 L42871	0-1 stable selector 1-0-1 unstable selector 1-0-1 stable selector unstable blue push button unstable green push button
5	L42964	keycode
6	L43277 L43276 L43238	kit case + gasket (with screws) kit case + gasket with display (with screws) bottom case
7	L43183	joystick logic interface board
8	L42930	belt
9	L43134 L43133	1-axis joystick 4-4 2-axes joystick 4-4/4-4
10	L43189	complete kit of screws
11	L43172	transmitting antenna


Jump push button transmitter unit

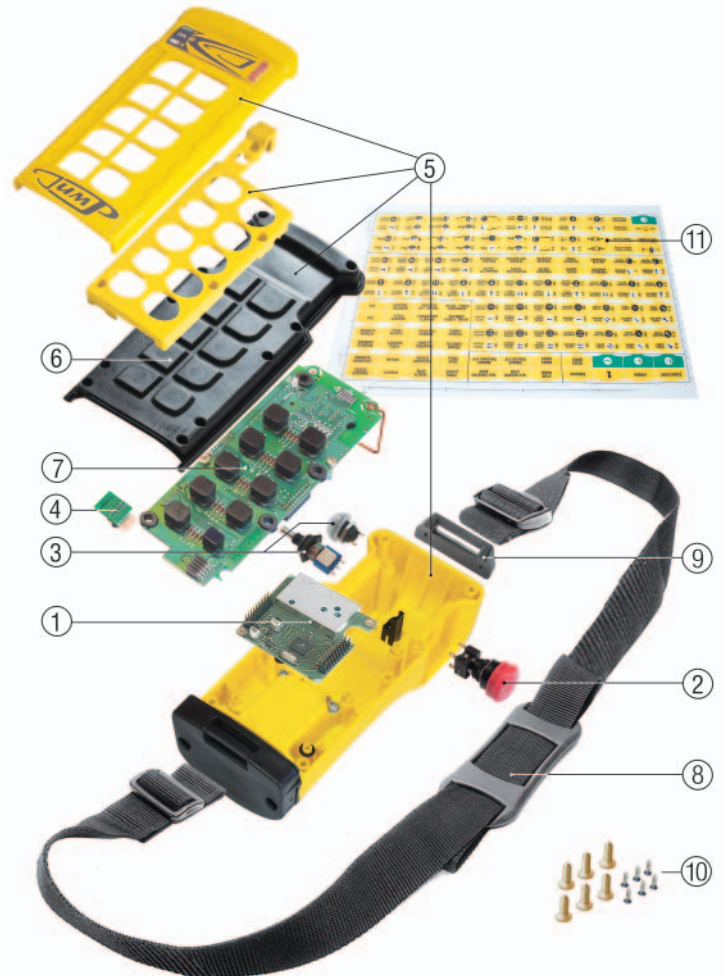

Pos.	Code	Description
1	L42962 L43082	logic + radio transmitter logic + radio transceiver
2	L33406	emergency stop
3	L42641 L42643 L42642 L42872 L33557	0-1 side stable selector 1-0-1 side unstable selector 1-0-1 side stable selector side unstable blue push button side 0-1 key selector
4	L42964	keycode
5	L43185 L43186 L43187	kit case + gasket (with screws) - 6 push buttons kit case + gasket (with screws) - 9 push buttons kit case + gasket (with screws) - 13 push buttons
6	L42975 L42989	gasket - 6 and 9 push buttons gasket - 13 push buttons
7	L43173.1 L43173 L43175 L43173.3 L43173.2 L43175.1	keyboard - 6 push buttons keyboard - 9 push buttons keyboard - 13 push buttons keyboard - 6 push buttons with display keyboard - 9 push buttons with display keyboard - 13 push buttons with display
8	L43241	belt
9	L43214	front support for belt
10	L43188	complete kit of screws
11	L43240	set of symbols labels


Spare parts for “J” receiver units

Outdoor receiver unit

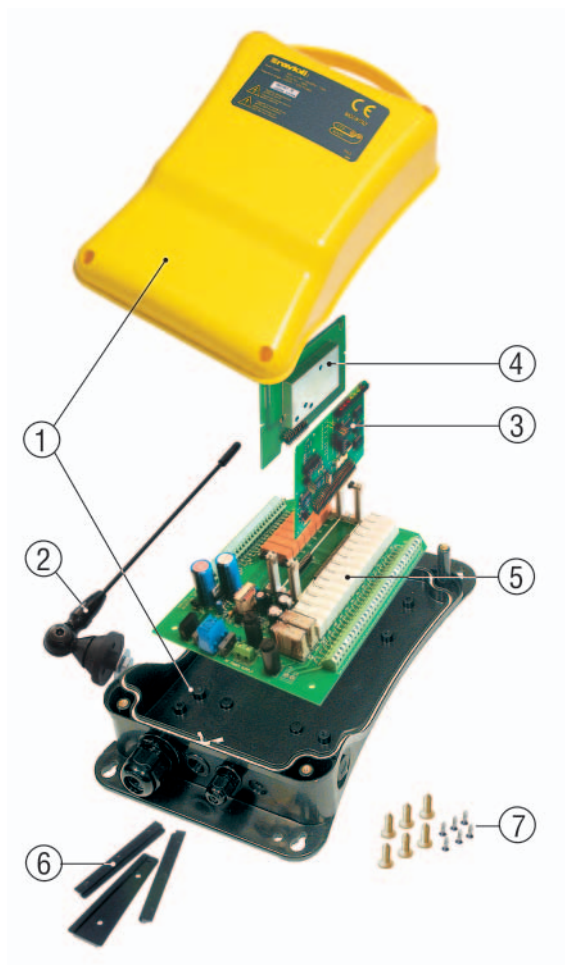

Pos.	Code	Description
1	I43103	complete case for models without external antenna
	I43103.1	complete case for models with external antenna
2	I43180	external antenna for outdoor receiver unit
3	I42971.1	logic receiver
	I42971	logic transceiver
4	I42972	radio receiver
	I43094	radio transceiver
	I42972.1	radio receiver for external antenna
	I43094.1	radio transceiver for external antenna
5	I42973	mother board 20 relays Vac
	I42953	mother board 20 relays Vdc
6	I43010	bracket
7	I43190	complete kit of screws

Receiver unit for control board

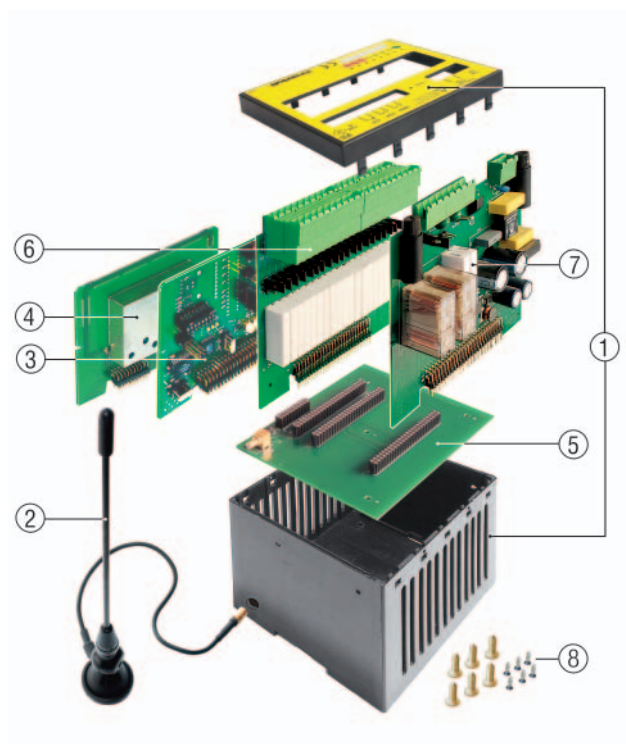

Pos.	Code	Description
1	I43152	complete case for receiver unit
	I43152.1	complete case for data feed-back receiver unit
2	I43162	external antenna for receiver unit for control board
3	I42971.1	logic receiver
	I42971	logic transceiver
4	I42972	radio receiver
	I43094	radio transceiver
5	I43095	mother board
6	I43096	20 relays board
7	I43097	power supply board
8	I43194	complete kit of screws

Battery charger and batteries

Pos.	Code	Description
1	LCB800A	Battery charger
2	LNH800	Battery

Ed. 09.11 - pag.2