

Connect · Contact · Control

Connectors

LV-HPC Series High Power Connectors for faster charging of industrial trucks

Catalogue A84.en





High Power Connectors LV-HPC Series

More Power for Faster Charging


With the new LV-HPC Series Schaltbau charging connectors satisfy the requirements of DIN VDE 0623-589 for a high current-carrying capacity. Thus an active energy and battery management system that optimizes the current flows and preserves the battery becomes possible. After use, the batteries can be quickly recharged so as to minimize downtimes.

Due to its modular design, the charging connector can be adapted to customer requirements. Additional pilot contacts are available for use with battery management systems, which constantly monitor the condition of the (lithium-ion) battery, thereby guaranteeing maximum battery life.

Charging connectors must keep to the maximum temperature difference that is allowed to occur due to the charging process. The contact system of the LV-HPC Series is designed in such a way that the contacts are capable of carrying high currents with minimal self-heating.

In addition to pilot contacts, optional adapters for water top up and electrolyte circulation systems are available. For details refer to catalogue A841 "Multifunctional Adapters for Charging Connectors" or visit our website at www.schaltbau-gmbh.com

Features Series LV-HPC

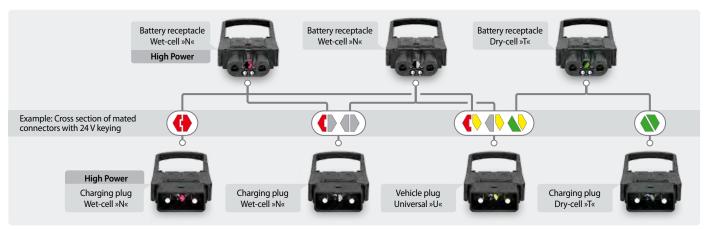

Schaltbau Power Bridge – Keying according to DIN VDE 0623-589 for wet-cell and dry-cell batteries

• Higher current-carrying capacity

The new LV-HPC charging connectors comply with DIN VDE 0623-589 for a higher current-carrying capacity.

• High-quality, screw-machine power contacts

Due to an improved design, the contacts feature a higher currentcarrying capacity, minimum contact heating and a continuous low contact resistance. With constant contact force over its working life, the connector is less susceptible to wear and tear while mating and unmating.

Modular design

Standardized individual components can be used across the entire connector series. They allow for a customized and cost-effective realisation of your applications, and avoid unnecessary stocking of items.

• Integrated lock function

The mated shells of the LV-HPC Series connectors provide positive locking resistance to shock, vibration and other decoupling forces that may occur under normal conditions of use.

• Intermateable with connectors of other manufacturers

The LV-HPC Series is intermateable with all commercially available charging connectors to DIN VDE 0623-589 of comparable design - even when used with air tube adapter.

• Keying to DIN VDE 0623-589

Colour coded keying plugs are used for keying of conventional battery voltages. The colours stand for:

Red: Wet-cell battery, allowing for higher amperage

Grey: Wet-cell batteryGreen: Dry-cell batteryYellow: Vehicle plug, universal

The diagram shows a cross section of mated LV-HPC Series charging connectors keyed to 24 V.

• High resistance to acids and extremes of temperature

The material used for the connector shells including strain relief is made of a thermoplastic that is highly resistant to sulphuric acid of high concentration.

The proven housing material makes for the connector's ruggedness and suitability for use with temperatures ranging from -30 °C to +90 °C.

Optional adapters for electrolyte circulation and pilot contacts

Air tube adapter: Schaltbau LV-HPC series charging connectors can be equipped with optional air tube adapters for use with batteries with electrolyte circulation system.

Pilot contact adapter: To be fitted with 2 optional pilot contacts which provide a datal link between the battery management system and the charger.



Specifications Series LV-HPC

Series	l Standard	LV 320/400	LV160/250	LV80/120
Rated operating current *1 Main contacts Pilot/aux contacts	DIN VDE 0623-589	320 A / 380 A* ¹ 20 A	160 A / 250 A* ¹ 20 A	80 A / 160 A* ¹ 20 A
Rated voltage Altitude correction factor 1	DIN VDE 0623-589 IEC 60664-1	150 V	150 V	150 V
Keying Rated operating voltage Keying plug	DIN VDE 0623-589	red*¹/	24/36/48/72/80/96 V Ill battery, ⑤ green: dry-cell batte	ery, 🌘 yellow: vehicle plug
Main contacts Number of Contact diameter Wire gauge AWG 5 (16 mm²) AWG 3 (25 mm²) AWG 1 (35 mm²) AWG 1/0 (50 mm²) AWG 3/0 (70 mm²) AWG 4/0 (95 mm²)	DIN VDE 0623-589	2 10 mm O+LVRH50/35*2 *3 *1,3	2 8.5 mm O+LVRH50/25*2 O+LVRH50/35*2 •*1	2 6 mm O+LVRH25/16*2 •*1
Pilot contacts Number of Contact diameter Wire gauge AWG 13 (2.5 mm²)	DIN VDE 0623-589	2 4 mm	2 4 mm •	2 2.3 mm •
Auxiliary contacts Number of Contact diameter Wire gauge AWG 13 (2.5 mm²)	DIN VDE 0623-589	2 4 mm •	2 2.3 mm •	2 2.3 mm •
Air tube adapter Adapter for air tube size 6 mm 910 mm	DIN VDE 0623-589	• •* ⁷	• •* ⁷	• •*7
Crimped connection Main contacts Pilot contacts		w/ crimping*4 crimping	w/ crimping*4 crimping	w/ crimping* ⁴ crimping
Ingress protection rating (IP code)	IEC 60529	IP23* ⁵	IP23* ⁵	IP23* ⁵
Temperature range		-30 °C +90 °C*6	-30 °C +90 °C*6	-30 °C +90 °C*6
Mating cycles	EN 1175-1	5,000	5,000	5,000
Shells PBT GF30 (PBB and PBDE free) Integrated lock function Strain relief Flammability rating		• • • UL 94-V0	• • • UL 94-V0	● ● UL 94-V0
Handle styles Snap-on Screw-on Handle colour Black Red (for emergency cutout)		•	•	•
Approvals		c Au ® us	c Au ° us	c FL ® Us
See		Page 6, 7	Page 8, 9	Page 10, 11

^{*1} For 380 A, 250 A and 120 A use corresponding red keying plug and observe the wire gauges as indicated by the DIN VDE 0623-589 standard. See also page 14 for detailed information on maximum current carrying capacity of cables depending on wire gauge, and battery pulse charging.

 $^{^{*2}}$ Reducers: Included with contacts whose terminals are designed for a bigger AWG wire size reducing it down to a smaller size.

 $^{^{*3}}$ Drop height of 1.5 m max. for LV320/400 with wire gauge 70 $\mathrm{mm^2}$ and 90 $\mathrm{mm^2}$

^{*4} Assembly and crimping instructions, will be provided on request


^{*5} IPx3 when mounted horizontally

^{*6} Current-carrying capacity curves on requeast

 $^{^{*7}}$ For air tubes with large inside diameters use extra adapter, see page 9: Extra air tube adapters.

Components, spare parts

Series LV-HPC

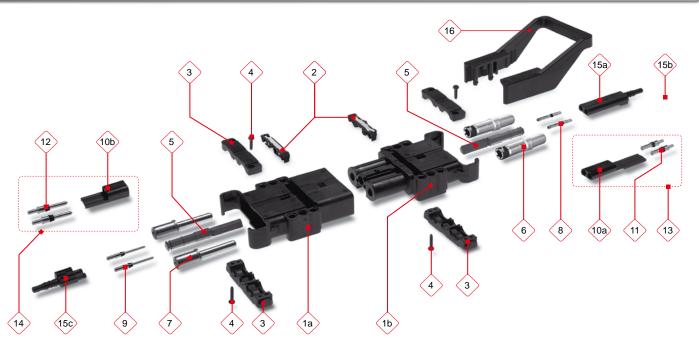

ltors	Identification			Ordering code	Docerintian	
ltem	identification		LV320/400	LV320/400 LV160/250 LV80/120		Description
1a	Plug shell		LV320/400 G-P	LV160/250 G-P	LV80/120 G-P	Shell to enclose pin contacts
1b	Receptacle shell		LV320/400 G-SP	LV160/250 G-SP	LV80/120 G-SP	Receptacle with pre-assembled item 10a
			LV320/400 G-SL	LV160/250 G-SL	LV80/120 G-SL	Receptacle with added item 15a
		black	LV320/400 S			Locks main contacts in place
2	Slider	grey		LV160/250 S	IV00 C	(LV320 also auxiliary contacts)
3	C I	green	LV320 D	LV160 D	LV80 S LV80 D	2x for strain relief
3	Clamp		LV320 D	LV 100 D	LV80 D	
			663540	663540	663546	2x self-tapping screw for strain relief:
4	Screw for clamp		SC 3.5x19 SC 3.5x25	SC 3.5x19	SC 3.5x16	Wire gauge AWG 1/0 max. (50 mm²) Wire gauge AWG 3/0, AWG 4/0 (75/90 mm²)
		red		400 NrS	LV120 NrS	for battery receptacle, high amperage, wet-cell
		red		400 NrS 400 NrP	LV120 NrS LV120 NrP	for charging plug, high amperage, wet-cell
5	Keying plug	grey		320 Ngr	LV80 Ngr	for battery receptacle/charging plug, wet-cell
	, ,,	green	LV160/	320 Tgn	LV80 Tgn	for battery receptacle/charging plug, dry-cell
		yellow	LV160/	320 Uge	LV80 Uge	for vehicle plug
		AWG 4/0 (95 mm ²)	LV320 S10/95			
6	Main contact	AWG 3/0 (70 mm ²)	LV320 S10/70			2x main contact for battery receptacle
(socket)		AWG 1/0 (50 mm ²) AWG 3 (25 mm ²)	LV320 S10/50	LV160/250 S8.5/50	LV80/120 S6/25	, , , , , , , , , , , , , , , , , , , ,
		. , ,			LV80/120 30/23	
	Main contact	AWG 4/0 (95 mm ²) AWG 3/0 (70 mm ²)	LV320 P10/95 LV320 P10/70			
7		AWG 1/0 (50 mm ²)	LV320 P10/50	LV160 P8.5/50		2x main contact for charging plug/vehicle plug
	(Piii)	AWG 3 (25 mm ²)			LV80 P6/25	
		70/50 (AWG 3/0 to 1/0)	LV RH70/50			Reducing AWG 3/0 down to AWG 1/0
	Reducer	50/35 (AWG 1/0 to 1)	LV RH50/35	LV RH50/35		Reducing AWG 1/0 down to AWG 1
	neducei	50/25 (AWG 1/0 to 3)		LV RH50/25		Reducing AWG 1/0 down to AWG 3
		25/16 (AWG 3 to 5)			LV RH25/16	Reducing AWG 3 down to AWG 5
8	Aux. contacts	Socket AWG 13 (2.5 mm ²)	LV320 BCC-2.5-Ag	LV160 BBC-2.5-Ag	LV80 BBC-2.5-Ag	2x auxiliary contact for battery receptacle
9	Aux contucts	Pin AWG 13 (2.5 mm ²)	LV320 SCC-2.5-Ag	LV160 SBC-2.5-Ag	LV80 SBC-2.5-Ag	2x aux. contact for charging plug/vehicle plug
10a	Dilat cauta et a dantau	Receptacle	LV160/3	320 PA-S	LV80 PA-S	Adapter for pilot contacts, sockets
10b	Pilot contact adapter	Plug	LV160/3	320 PA-P	LV80 PA-P	Adapter for pilot contacts, pins
11		Socket AWG 13 (2.5 mm²)	BCC-2	2.5-Ag	LV80 BBC-2.5-Ag	2x pilot contact for battery receptacle
12	Pilot contacts	Pin AWG 13 (2.5 mm²)		2.5-Ag	LV80 SBC-2.5-Ag	2x pilot contact for charging plug/vehicle plug
13		Adapter + socket contacts	LV160/3	20 P-S/S	LV80 P-S/S	Set, including items 10a, 11
14	Pilot contact set	Adapter + pin contacts		20 P-P/S	LV80 P-P/S	Set, including items 10b, 12
15a	Air tube adapter	for receptacle		320 LV-S	LV80 LV-S	for air tube with inside Ø 6 mm
15b	Spacer	for receptacle		320 DS-L	LV80 DS-L	for securing air tube adapter (item 15a) in recep
. 55	- Trucci	151 receptable	27.00/3		2.0005	tacle shell (item 1b)
15c	Air tube adapter	for plug	LV160/3	320 LV-P	LV80 LV-P	for air tube with inside Ø 6 mm
	Evens sineubs adames			LV80/160/320 V-S 6/6		for air tube with inside Ø 6 mm
	Extra air tube adapter			LV80/160/320 V-S 6/10)	for air tube with inside Ø 910 mm
		Black, snap-on	LV160/	320 H3	LV80 H1	Snap-on handle for receptacle /
16	Handle	Red, snap-on		320 H4	LV80 H2	plug shell .
10	Tidildie	Black, screw-on		320 H1/S	LV80 H1/S	Screw-on handle for receptacle/
		Red, screw-on	LV160/3	320 H2/S	LV80 H2/S	plug shell, including screws



Ordering code, pre-assembled cables

Series LV-HPC

Ordering code LV-HPC Series

Example: LV320/400-R-S95-Series Amperage High Standard 380 A *1 LV320/400 320 A 250 A *1 LV160/250 160 A 120 A *1 LV80/120 80 A Keying plug Red, wet-cell, high amperage Ν Grey, wet-cell battery Green, dry-cell battery Т U Yellow, vehicle plug, Universal *2

Contacts wire gauge

Contacts, wire gauge					
 LV320/400 					
P95	Pin	AWG 4/0	(95 mm ²)		
P70	Pin	AWG 3/0			
P50	Pin	AWG 1/0	$(50 \text{ mm}^2 *^3)$		
S95	Socket	AWG 4/0	(95 mm ²)		
S70	Socket	AWG 3/0	(70 mm^2)		
S50	Socket	AWG 1/0	$(50 \text{ mm}^2 *^3)$		
• LV160/250					
P50	Pin	AWG 1/0	(50 mm^2)		
P35	Pin	AWG 1	$(35 \text{ mm}^2 * 3)$		
P25	Pin	AWG 3	$(25 \text{ mm}^2 *3)$		
S50	Socket	AWG 1/0	(50 mm^2)		
S35	Socket	AWG 1	$(35 \text{ mm}^2 * 3)$		
S25	Socket	AWG 3	$(25 \text{ mm}^2 *^3)$		
• LV80/120					
P25	Pin	AWG 3	(25 mm ²)		
P16	Pin	AWG 5	`'		
S25	Socket	AWG 3	(25 mm ²)		
S16	Socket	AWG 5	$(16 \text{ mm}^2 * 3)$		

0-2-L0-H3	
	— Handle
None	H0
Black, snap on *5	H1
Red, snap on *5	H2
Black, screw on	H1/S
Red, screw on	H2/S
Black, snap on *6	H3
Red, snap on *6	H4
1 1 1	
	ir tube adapter
A None	ir tube adapter L0
None	LO .
None	L0 L1
None Air tube adapter *4	L0 L1 Aux. contacts
None Air tube adapter *4 None	L0 L1 Aux. contacts
None Air tube adapter *4 None	L0 L1 Aux. contacts 0 2


- *1 Higher current-carrying capacity in compliance with DIN VDE 0623-589; requires red keying plug R.
- *2 Yellow keying plug only supplied with charging and vehicle plug.
- *3 Contact supplied with reducer.
- *4 Schaltbau LV-HPC charging connectors can be equipped with optional pilot contacts or air tube adapters for electrolyte circulation

Do you need other optional components? You will find more information in our catalogue A841 "Multifunctional adapters for LV-HPC Series charging connectors".

- *5 Only available for LV80/120 Series
- *6 For use with LV160/250 and LV320/400 Series

Schaltbau Power Bridge

Modular design for scalable solutions between vehicle, battery and charger. The LV-HPC Series connectors guarantee a currentcarrying capacity of 400 A.

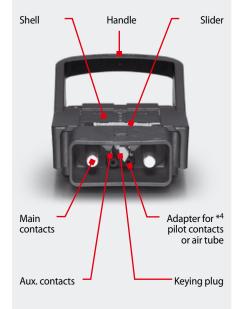

LV-HPC: Charging plug/vehicle plug, front view

Do you need assembled connectors?

If so, do not hesitate to contact us! We supply receptacles and plugs complete with preassembled cables of different lengths and wire gauges and with a variety of cable terminal

Cables and terminal ends:

- Welding cables with rubber jackets according to DIN VDE 0282-6, e.g. H01N2-D
- · Flex battery terminal conductor
- Perfect battery terminal conductor
- Battery terminal conductor with cable lug

Wire gauges:

• AWG 5 ... 4/0 (16 ... 95 mm²)

Wire connection:

• Main contacts: w/ crimping Pilot/aux. contacts: crimping

Marking of cables:

- Red shrink tube ⊕-terminal
- Blue shrink tube ⊖-terminal
- Product named on rubber jacket of cable

ends for the battery to suit your requirements. Schaltbau guarantees a constant high quality of the pre-assembled connector.

Strain relief:

• All cables are secured against stress and strain by the strain relief clamp being an integral component of the connector shell.

Air tube adapter:

• For air tube with inside diameter Ø 6 mm, wall thickness 1.5 mm, Shore 73 hardness.

Quality assurance:

- DIN EN ISO 9001:2000
- EN ISO 14001:1996

Pre-assembled cables

Schaltbau supplies connectors complete with pre-assembled battery terminal conductors to suit your application.



Flex battery terminal conductor



Perfect battery terminal conductor



Battery terminal conductor with cable lug



Note:

Presented in this catalogue are only stock items which can be supplied in short delivery time. For some variants minimum quantities apply. Please do not hesitate to ask for the conditions.



Special Variants:


if you need a special variant, please do not hesitate to contact us. Maybe the type of charging connector you are looking for is among our many special designs. If not, we can also supply customized designs. In this case, however, minimum ordering quantities apply.




LV320/400 Series Dimension diagrams, Contacts

Series LV-HPC


• Charging plug / vehicle plug LV320/400

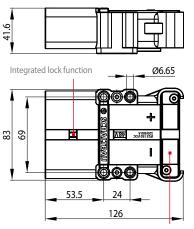


Snap-on handle

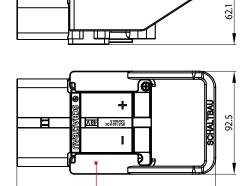

181.5

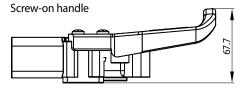


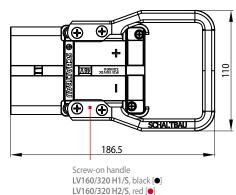


Strain relief (clamp)


np) Snap-on handle LV160/320 H3, black [●] LV160/320 H4, red [●]


• Battery receptacle LV320/400

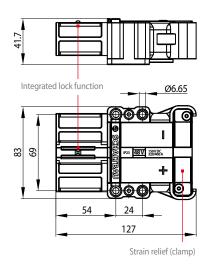


Snap-on handle

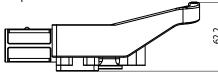

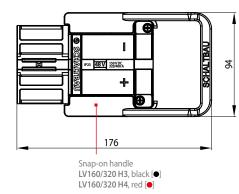

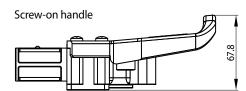

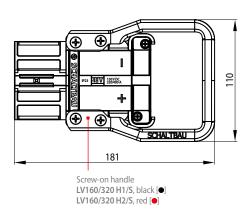

• Main contacts, aux. contacts

Main contacts Ordering code	Туре	Wire gauge HPC* Standard		Rated of	current Standard
LV320 S10/95	Socket	AWG 4/0 (95 mm²)	AWG 4/0 (95 mm ²)	380 A	320 A
LV320 P10/95	Pin	AWG 4/0 (95 mm ²)	AWG 4/0 (95 mm ²)	380 A	320 A

Aux. contacts Ordering code	Туре	Wire gauge	Rated current
LV320 BBC-2.5-Ag	Socket	AWG 13 (2.5 mm²)	20 A
LV320 SBC-2.5-Ag	Pin	AWG 13 (2.5 mm²)	20 A



Note:

- Wire gauge: Reducers also reduce the current rating.
- High Power Connectors: Connectors with high current-carrying capacity require a wire gauge of AWG 4/0 (95 mm²). The use of reducers is not allowed.
- Maximum current-carrying capacity curves: Determined solely by the wire gauge – the use of reducers has no bearing on the maximum current-carrying capacity curve. The values are only valid for the main contacts with w/ crimping.


^{*} High Power Connector, to be used with red keying plug





LV160/250 Series Dimension diagrams, Contacts


Series LV-HPC




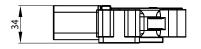

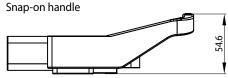


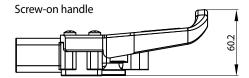


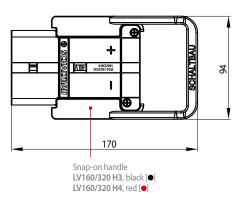


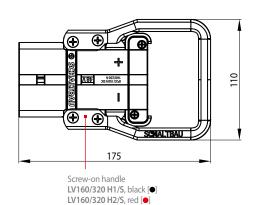



• Battery receptacle LV160/250

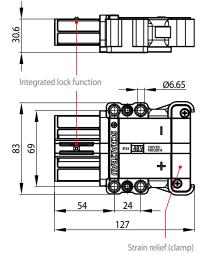

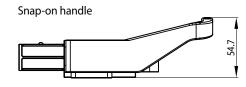

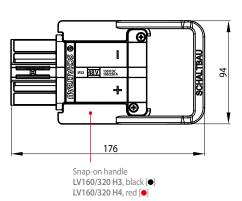

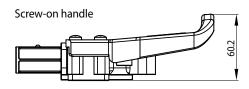

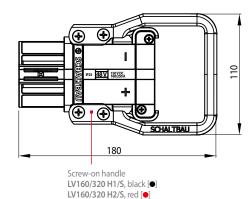

Main contacts, aux. contacts

Main contacts Ordering code Type		Wire of HPC*	Wire gauge HPC* Standard		current Standard
LV160/250 S8.5/50	Socket	AWG 1/0 (50 mm ²)	AWG 1/0 (50 mm ²)	250 A	160 A
LV160 P8.5/50	Pin	AWG 1/0 (50 mm ²)	AWG 1/0 (50 mm ²)	250 A	160 A

Aux. contacts Ordering code	Туре	Wire gauge	Rated current
LV160 BCC-2.5-Ag	Socket	AWG 13 (2.5 mm²)	20 A
LV160 SCC-2.5-Ag	Pin	AWG 13 (2.5 mm²)	20 A

(i)

Note:

- Wire gauge: Reducers also reduce the current rating.
- High Power Connectors: They feature a high current-carrying capacity and require AWG 1/0 (50 mm²) for termination. The use of reducers is not allowed.
- Maximum current-carrying capacity curves: Determined solely by the wire gauge – the use of reducers has no bearing on the maximum current-carrying capacity curve. The values are only valid for the main contacts with w/ crimping.


^{*} High Power Connector, to be used with red keying plug




LV80/120 Series Dimension diagrams, Contacts


Series LV-HPC




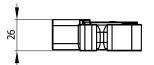

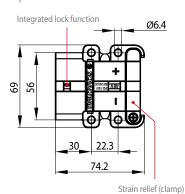



Snap-on handle

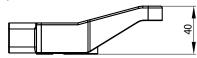

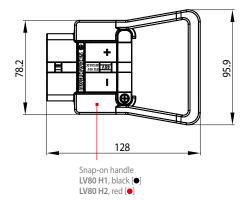


Screw-on handle

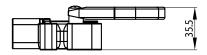

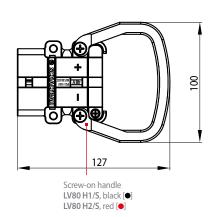


• Battery receptacle LV80/120

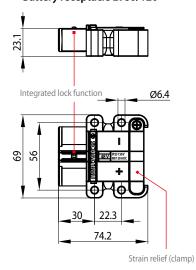



Snap-on handle



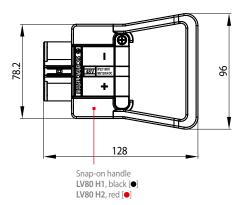

Screw-on handle

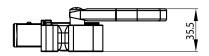

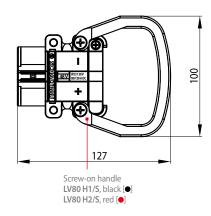

• Main contacts, aux. contacts

Main contacts Ordering code	Туре	Wire of HPC*	gauge Standard	Rated of HPC*	current Standard
LV80/120 S6/25	Socket	AWG 3 (25 mm ²)	AWG 3 (25 mm ²)	120 A	80 A
LV80 P6/25	Pin	AWG 3 (25 mm²)	AWG 3 (25 mm²)	120 A	80 A

Aux. contacts Ordering code	Туре	Wire gauge	Rated current
LV80 BCC-2.5-Ag	Socket	AWG 13 (2.5 mm²)	20 A
LV80 SCC-2.5-Ag	Pin	AWG 13 (2.5 mm²)	20 A



- Note:
- Wire gauge: Reducers also reduce the current rating.
- **High Power Connectors:** They feature a high current-carrying capacity and require AWG 3 (25 mm²) for termination. The use of reducers is not allowed.
- Maximum current-carrying capacity curves: Determined solely by the wire gauge – the use of reducers has no bearing on the maximum current-carrying capacity curve. The values are only valid for the main contacts with w/ crimping.

^{*} High Power Connector, to be used with red keying plug



Adapters Pilot contact adapter, Air tube adapter, Multifunctional adapter

Series LV-HPC

Adapter options for customizing your LV-HPC Series charging connector:

• Pilot contact adapter

Adapter to be fitted with 2 additional pilot contacts for monitoring the battery state and other control functions.

Pilot contact adapter	Ordering code				
Filot contact adapter	LV320/400 Series LV160/250 Series		LV80/120 Series		
Set*: 1x Adapter + 2x socket contact	LV160/320 P-S/S		LV80 P-S/S		
Set*: 1x Adapter + 2x pin contact	LV160/320 P-P/S		LV80 P-P/S		

^{*} See also table on page 4

• Air tube adapter

Air supply for batteries with electrolyte circulation system. Electrolyte circulation ensures that the electrolyte is gently mixed by an airstream while the battery is being recharged and prevents the battery acid from becoming layered in the individual cells. This results in a shorter charging time and in reduced energy and water consumption.

Air tubo adaptor	Ordering code			
Air tube adapter	LV320/400 Series	LV160/250 Series	LV80/120 Series	
1x Adapter for receptacle shell* + 1x Spacer*	LV160/320 LV-S LV160/320 DS-L		LV80 LV-S LV80 DS-L	
1x Adapter for plug shell*	LV160/320 LV-P		LV80 LV-P	

^{*} See also table on page 4


Multifunctional adapter

Multipurpose adapter for water top up and electrolyte circulation systems. The new feature that the flow of air and/or water is shut off when the connector is unmated ensures that no acid particles enter the interior of the vehicle.

For more information, especially on the multifunctional adapter:

www.schaltbau-gmbh.com


Catalogue A841: schaltbau.info/download1en

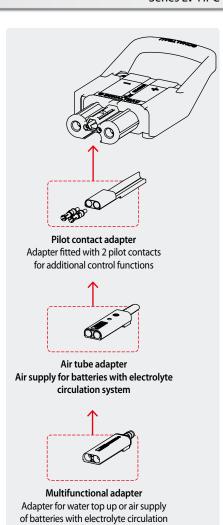

system

Extra air tube adapters

Accessories

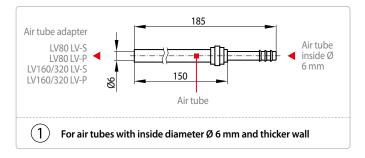


Do you need an adapter for air tubes with greater inside diameter or thicker walls?

The extra air tube adapter becomes necessary when air tubes are used with:

• Inside diameter Ø9 ... 10 mm

• Inside diameter Ø 6 mm and thicker wall

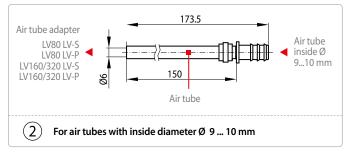

Extra air tube adapter	Ordering code	Fig.
Adapter for air tube with inside diameter 6 mm and thicker wall	LV80/160/320 V-S 6/6	1
Adapter for air tube with inside diameter 9 10 mm	LV80/160/320 V-S 6/10	2



Installation and safety instructions

Accessories

The circular industrial connectors dealt with in this catalogue are intended for use with low-voltage systems and special installations. They are designed and tested in compliance with the generally recognised state of the art. However, the improper use, operation, handling, maintenance of or tampering with electric equipment can cause serious or fatal injury to the user or others, and the appliance or other property can be damaged.



Due to our continuous improvement programme, the design of our products can be modified at any time. So some features may differ from the descriptions, specifications and drawings in the catalogue.

You can download the latest update of the catalogue at schaltbau.info/download1en. The updated catalogue renders the previous issue invalid. Only authorized and trained personnel are allowed to plan and carry out all mechanical and electrical installations, transport, commissioning, as well as maintenance and repair work. This applies to the observation of the general installation and safety regulations for low-voltage systems as well as the proper use of tools approved for this purpose. Electric equipment requires protection from moisture and dust during installation, operation and storage.



Electrical hazards: Any exposure to the connector's live parts. Risk of electrical shock!

Observe all applicable national provisions, all safety, accident prevention and environmental regulations as well as the recognized technical rules for safe and proper working.

Installation instructions

- Work on electric equipment may only be performed by a qualified electrician or trained personnel working under the direction and supervision of a qualified electrician according to the applicable rules of electrical engineering.
- The connectors supply power and signals. They are intended for plug-in and detachable connections of components, devices and systems only.
- In order to comply with IEC 61984 make sure that always the currentcarrying part of the connector – no matter whether plug or receptacle
 – is fitted with socket contacts.
- For optimum protection of the cable connection make sure the connector is supplied with a strain relief.
- According to IEC 60352-2 "Solderless connections" crimp contacts are required.
- Make sure that there is no undue strain, pressure, flexing and torsion on the cable connection.

Installation and maintenance instructions LV Series



For a detailed list of all safety, installation and maintenance instructions, download our manual A84-M.en!

Inverse-polarity protection

In order to guarantee inverse-polarity protection the LV-HPC Series must always be fitted with a pilot contact adapter or an air tube adapter when intended for intermating with existing connectors of comparable design made by other manufacturers.

Schaltbau, therefore, delivers LV-HPC Series connectors generally with a pilot contact adapter pre-assembled in the receptacle shell or an added air tube adapter with connectors for electrolyte circulation systems!



Inverse-polarity protection guaranteed when engaging connectors of the same LV-HPC Series

Safety instructions

- Carry out regular inspections of all protection and safety devices to see if they work properly.
- According to IEC 61984 connectors used as intended must not be engaged or disengaged when live or under load.
- A connector that does not engage easily requires special attention: Check for the correct orientation or if its contacts got bent or polluted. Never use force! The connector should always engage easily.
- To prevent dust and moisture from entering, make sure that the connector, when not mated, is covered by the protective cap.
- When disengaging a connector, pull the plug and never the cable.
- Use the connector only according to its intended use. Replace or repair damaged parts exclusively with original parts. Any other usage of or tampering with the connector is considered contrary to its intended use. No liability is assumed for damages and accidents caused due to non-compliance with the instructions or improper use of the connector.
- The connectors are designed for special environmental conditions as defined by "Specifications" on page 3 of this catalogue. Any use which goes beyond the limits of these specifications is not regarded as the intended use of the connector.

Visual inspections

Be sure to make visual inspections regularly. Improper handling of the connector, e.g. when hitting the floor with some impact, can result in breakage, visible cracks and deformation.



Defective and/or leaky parts must be replaced instantaneously!

Disconnecting when live or under load

Disconnecting the connector when live or under load is generally only permitted under exceptional circumstances or in the case of imminent danger to operational safety according to EN 1175-1.

If the charging connector is used without auxiliary contacts the life of the main contacts can be considerably shortened because of contact welding when engaging or disengaging the connector.



When unmating the connector when live or under load, an arc is generated. That is why disconnecting under load is prohibited in the neighbourhood of explosives and other ignition sources.

S SCHALTBAU

Keying Voltage keying, Application keying

Series LV-HPC


Schaltbau charging connectors feature keying to DIN VDE 0623-589. Keying plugs of different colours make it easy to identify the right connector visually.

• Voltage keying:

There are six standard battery voltages to choose from: 24, 36, 48, 72, 80, 96 V. The voltages are marked on the sides of the hexagonal keying plug. The keyed voltage shows in the inspection hole of the plug and receptacle shell.

Keying plug Identification Assembled in 24 V For high amperage HPC Used for battery Battery receptacle [●]*1 Wet-cell »N« Features tongue ۸۲۷ Colour RED For high amperage HPC Used for charger Charging plug []*1 Wet-cell »N« Features groove Colour RED Battery receptacle [●]*1 Used for Wet-cell »N« Battery / charger Charging plug [●]*1 Colour GREY Wet-cell »N« Battery receptacle [●]*1 Used for Dry-cell »T« Battery / charger Charging plug []*1 Colour GREEN Dry-cell »T« Used for Vehicle plug [●]*1 Vehicle Universal »U« Colour YELLOW

This type of keying only allows for mating of connector halves for the same battery type. Thus a battery receptacle for dry-cell batteries is only intermateable with the charging plug for dry-cell batteries..

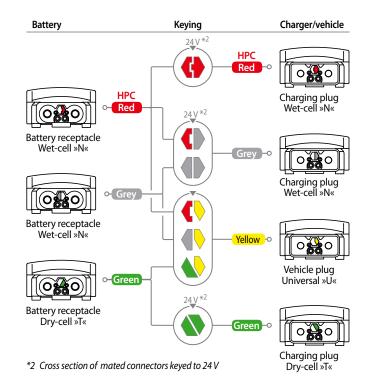

Tools Crimp tools, Extraction tools

*1 Keyed voltage, shows in inspection hole: $[\bullet]$ = receptacle, $[\bullet]$ = plug

Accessories



Hydraulic crimping tool Stocko WHPH 10 for the main contacts



Crimp tool CWZ-600-1 for both pilot and auxiliary contacts



Extraction tool **AWZ-C/H** for pilot contacts of the LV160/250 and LV320/400 series



Extraction tool LV160 AWZ-B for aux. contacts of the LV160/250 series extraction tool LV80 AWZ-B for both pilot and aux. contacts of the LV80/120 series

• w/ crimping of main contacts

The applicable standard for crimping the main contacts is IEC 60352-2 – Solderless crimped connections. Schaltbau requires w/ crimping of main contacts. For that purpose Schaltbau recommends the use of the hand tool WHPH 10 and for major quantities the hydraulic crimping heads WHK 8S, WHK 8 and WHK 9 respectively of the company Stocko.

Order from: Stocko (www.stocko.de) or retailer

Ordering code: Stocko WHPH 10 or comparable tool of other manufacturers

• Crimping of pilot and auxiliary contacts

The applicable standard for crimping of pilot and auxiliary contacts is IEC 60352-2 – Solderless crimped connections. Schaltbau recommends the use of crimp tool CWZ-600-1 for wire sizes AWG 25 ... 9 $(0.14 ... 6.00 \text{ mm}^2)$.

Order from: Schaltbau GmbH
Ordering code: Crimp tool CWZ-600-1

AWZ-C/H Extraction tool for pilot and aux. contacts

The tools are designed for the removal of pilot and auxiliary contacts from the assembled connector.

Series	Type of contact	Pin	Socket	Ordering code
LV320/400	Pilot contact	SCC-2.5-Ag	BCC-2.5-Ag	AWZ-C/H
	Aux. contact	LV320 SCC-2.5-Ag	LV320 BCC-2.5-Ag	*
LV160/250	Pilot contact	SCC-2.5-Ag	BCC-2.5-A	AWZ-C/H
	Aux. contact	LV160 SBC-2.5-Ag	LV160 BBC-2.5-Ag	LV160 AWZ-B
LV80/120	Pilot contact	LV80 SBC-2.5-Ag	LV80 BBC-2.5-Ag	LV80 AWZ-B
	Aux. contact	LV80 SBC-2.5-Ag	LV80 BBC-2.5-Ag	LV80 AWZ-B

^{*} Aux. contacts of the LV320/400 Series are secured from falling out of the shell by means of the slider.

[•] Application keying:

Schaltbau GmbH

For detailed information on our products and services visit our website – or give us a call!

Schaltbau GmbH Hollerithstrasse 5 81829 Munich Germany



Phone +49 89 9 30 05-0 Fax +49 89 9 30 05-350 Internet www.schaltbau-gmbh.com e-Mail contact@schaltbau.de with compliments:









Schaltbau GmbH manufactures in compliance with RoHS. The production facilities of Schaltbau GmbH have been IRIS certified since 2008.

Certified to DIN EN ISO 14001 since 2002. For the most recent certificate visit our website. Certified to
DIN EN ISO 9001
since 1994. For the most
recent certificate visit
our website.

Electrical Components and Systems for Railway Engineering and Industrial Applications

Connectors		Connectors manufactured to industry standards
Connectors		Connectors to suit the special requirements of
	_	communications engineering (MIL connectors)
		Charging connectors for battery-powered machines and systems
		Connectors for railway engineering, including UIC connectors
		Special connectors to suit customer requirements
Snap-action switches		Snap-action switches with positive opening operation
		Snap-action switches with self-cleaning contacts
		Enabling switches
		Special switches to suit customer requirements
Ct. d		
Contactors		Single and multi-pole DC contactors
		High-voltage AC/DC contactors Contactors for battery powered vehicles and power supplies
		Contactors for railway applications
		Terminal bolts and fuse holders
		DC emergency disconnect switches
		Special contactors to suit customer requirements
Electrics for rolling stock		Equipment for driver's cab
		Equipment for passenger use
		High-voltage switchgear
		High-voltage heaters
		High-voltage roof equipment
		Equipment for electric brakes

Design and engineering of train electrics

to customer requirements